



HOW EXCITING!

You are only minutes away from enjoying your new ePaper WiFi Digital Photo Frame.

Follow the simple instructions on the back to get started. Frame the memories!!



QUICK START GUIDE




Follow the steps below to get your ePaper frame up and running quick so you can start displaying your favorite family photos or digital artwork.

STEP 01




Download proprietary Our HUESSEN app from the Apple App Store or Google Play.

STEP 02

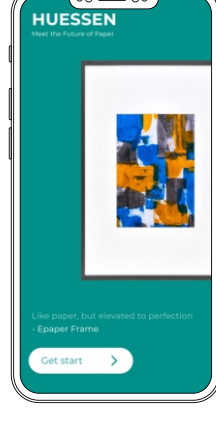


Open the app and select Get Started.

STEP 03

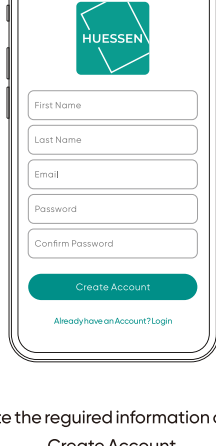

Complete the required information and select Create Account.

STEP 04

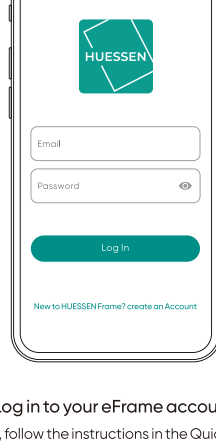


Log in to your eFrame account. Next, follow the instructions in the Quick Start Guide on how to send a photo to the frame.


QUICK START GUIDE



Product LED Indicator Light Status:

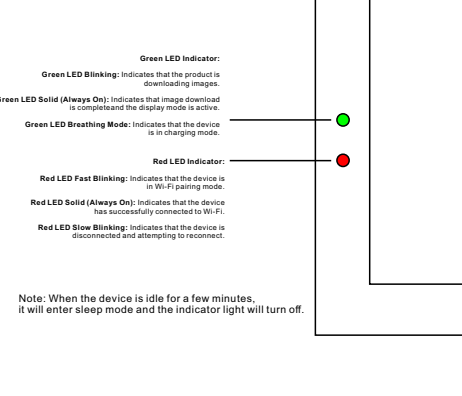


Button Function Description:

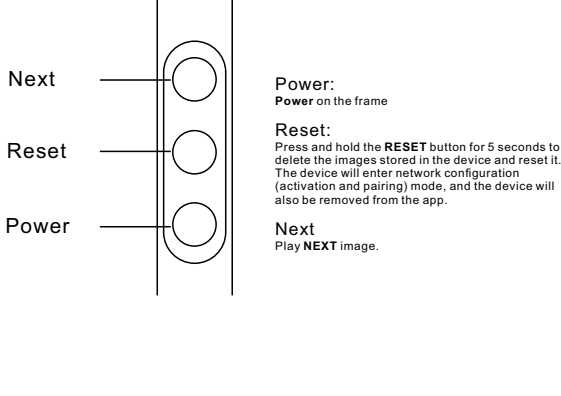

How to Connect Your ePaper Frame to the App and Wi-Fi Network:

STEP 01

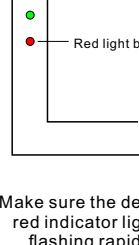

Make sure the device's red indicator light is flashing rapidly.

STEP 02



Open the app and tap the "+" button to add a new device.

STEP 03



Enter your home Wi-Fi ID and password (2.4GHz Wi-Fi only).

STEP 04



The device will successfully connect to the Wi-Fi network

QUICK START GUIDE



How to transfer images to your ePaper frame:

STEP 01




Open the app and select the ePaper Frame you want to send image to.

STEP 02




Add photo

STEP 03

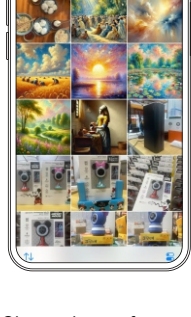


Choose image from your phone.

STEP 04

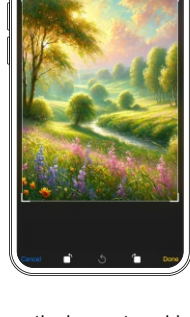

Crop the image to achieve the best full-screen display on the ePaper frame.

STEP 05

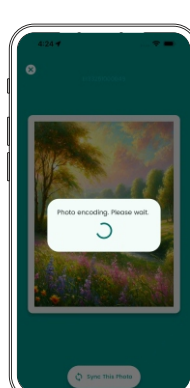

Send the image



Successful display on the frame